



1.) Find your Boot Sole Length (BSL) usually located on the heel of your boot.

2.) Match your BSL to the corresponding brand chart below. This will indicate the size of heel assembly required for your desired performance setting (Neutral or Active).

BSL RANGE				
	Small	Medium	Large	Long Travel
Neutral	250-275	280-310	315-355	305-335
Active	265-290	295-325	330-370	320-350

Note: "Long Travel" size option is only available with TTS Tour LT.

		NEUTRAL (FRONT)				ACTIVE (REAR)			
Mondo	BSL (mm)	Small	Medium	Large	Long Travel	Small	Medium	Large	Long Travel
22.5-23	275	X				X			
23.5-24	283		X			X			
24.5-25	291		X						
25.5-26	299		X				X		
26.5-27	307		X		X		X		
27.5-28	316			X	X		X		
28.5-29	325			X	X		X		X
29.5-30	333			X	X			X	X

		NEUTRAL (FRONT)				ACTIVE (REAR)			
Mondo	BSL (mm)	Small	Medium	Large	Long Travel	Small	Medium	Large	Long Travel
23-23.5	276					X			
24-24.5	286		X			X			
25-25.5	296		X				X		
26-26.5	306		X		X		X		
27-27.5	316			X	X		X		
28-28.5	326			X	X				X
29-29.5	336			X				X	X
30-30.5	346			X				X	X

		NEUTRAL (FRONT)				ACTIVE (REAR)			
Mondo	BSL (mm)	Small	Medium	Large	Long Travel	Small	Medium	Large	Long Travel
24.5-25	285		X			X			
25.5-26	296		X				X		
26.5-27	307		X		X		X		
27.5-28	315			X	X		X		
28.5-29	327			X	X				X
29.5-30.5	335			X	X			X	X