

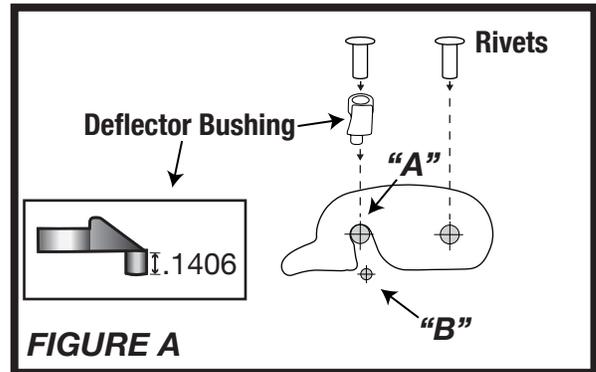


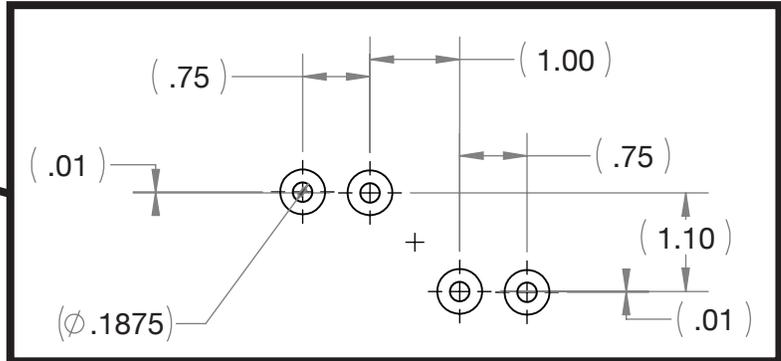


Voilé Splitboard Hole Pattern Specs
Dimensions in inches.

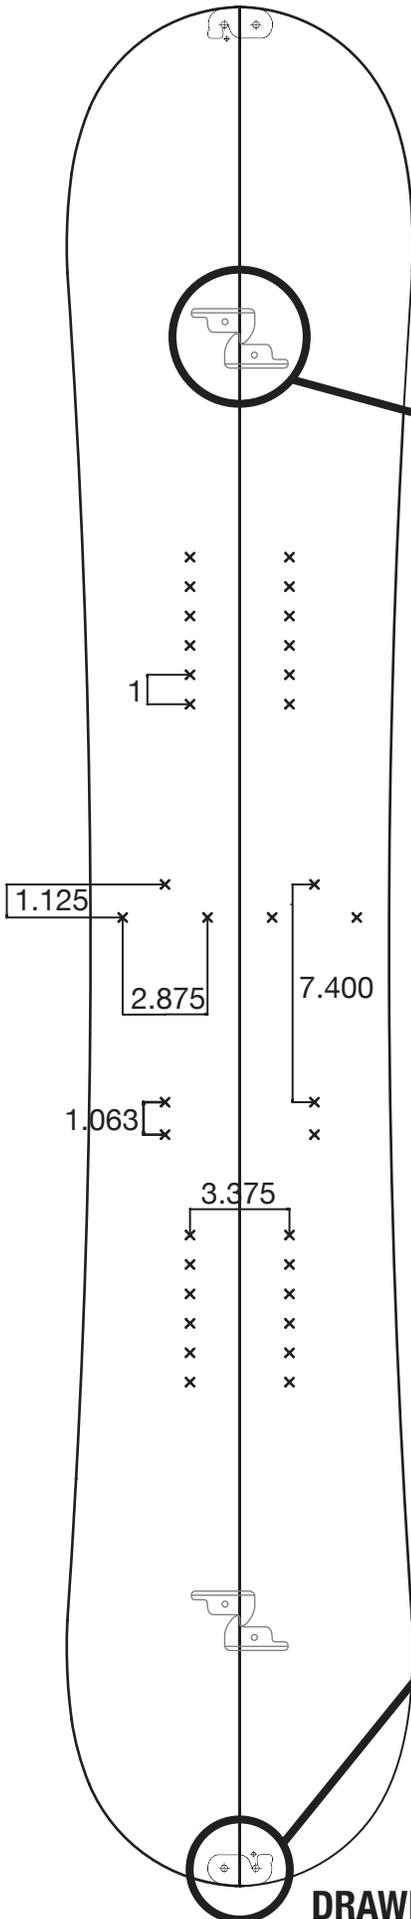

NOTE

Hole "B" should be drilled only if nylon Deflector Bushing will be installed. If you are using a metal bushing for hole "A", **DO NOT** drill hole "B". If Deflector Bushing will be installed, drill hole "B" to a depth of .1406". **DO NOT** drill hole "B" completely through Split Board. (See Figure A)

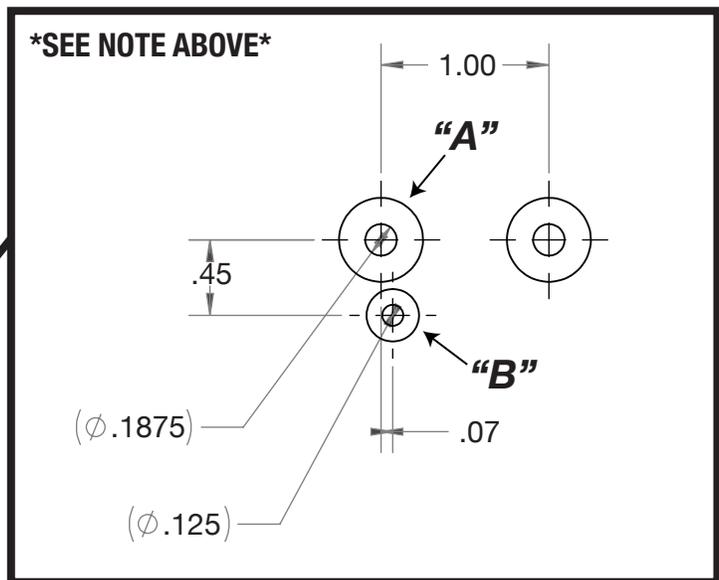

DRAWINGS NOT TO SCALE. FOR REFERENCE ONLY.