



STS TOUR BINDING

Splitboard Tech System



- Simple, effective and ultralightweight uphill tech binding for splitboard mountaineering.
- 300 Series stainless steel & tempered aluminum construction.

voile.com

MADE IN
UTAH
USA



Installation:


STS Binding should always be mounted to board half with lock lever facing inside/straight edge. Before assembling board halves for riding, put lock levers in locked position. For uphill touring, flip your board halves so the lock lever faces to the outside of each board half.




1.) Remove all hardware from the toe inserts on both board halves. Blow out the inserts to clear them of any debris.




2.) Assemble the STS Tour Binding for the left board half.

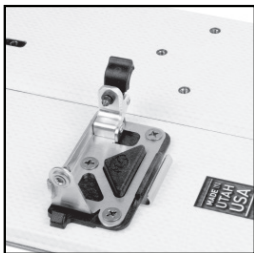

3.) Position the toe assembly over the left board half's inserts with the tech pins toward the board's tip. Fasten screws securely.

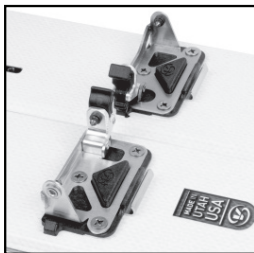

4.) Repeat for right board half.

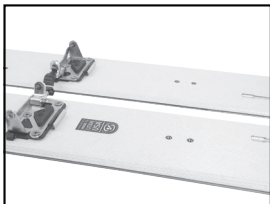


5.) Remove all hardware from the heel inserts on both board halves. Blow out the inserts to clear them of any debris.



6.) Place the heel assembly over the inserts with the wires facing up. Thread both screws, but **DO NOT TIGHTEN**.



7.) Lock your boot into the toe assembly, and reposition the heel assembly so that the heel rests centered on the climbing wires.

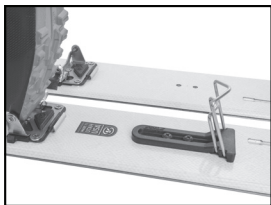

8.) Lift the boot, and fasten both screws securely. Repeat for the other board half.