



STS TOUR BINDING

Splitboard Tech System
Heel Assembly



 58mm & 80mm
Wire Heights

voile.com



MADE IN
UTAH
USA



Installation:




1.) Remove all hardware from the heel inserts on both board halves. Blow out the inserts to clear them of any debris.



2.) Place the heel assembly over the inserts with the wires facing up. Thread both screws, but DO NOT TIGHTEN.



3.) Lock your boot into the toe assembly, and reposition the heel assembly so that the heel rests centered on the climbing wires.

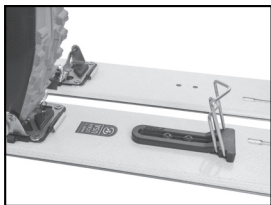

4.) Lift the boot, and fasten both screws securely. Repeat for the other board half.

