


All measurements are to be made from the ski tip back in a straight line.
DO NOT FOLLOW THE CONTOUR OF THE SKI.

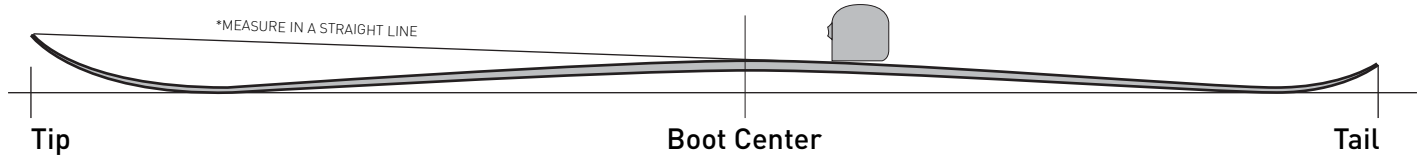

Manti ACE Manti Hyper Manti	158	84.0cm	33 1/16"
	165	87.7cm	34 1/2"
	171	90.8cm	35 3/4"
	176	93.4cm	36 13/16"
	181	96.1cm	37 13/16"
HyperDrifter	186	98.7cm	38 7/8"
	154	87.5cm	34 7/16"
	164	91.4cm	36"
	171	95.4cm	37 9/16"
	178	98.7cm	38 7/8"
Charger ACE HyperCharger SuperCharger / BC	186	104.1cm	41"
	154	87.5cm	34 7/16"
	157	87.6cm	34 1/2"
	164	91.4cm	36 1/16"
	171	95.4cm	37 9/16"
Vector ACE HyperVector / BC UltraVector / BC	178	98.7cm	38 7/8"
	185	103.5cm	40 3/4"
	154	87.5cm	34 7/16"
	157	87.6cm	34 1/2"
	164	91.4cm	36"
Endeavor / BC Hyper Endeavor / BC	171	95.4cm	37 9/16"
	177	98.1cm	38 11/16"
	184	102.9cm	40 1/2"
	157	87.6cm	34 1/2"
	164	91.4cm	36"
Hyper V8 V8	171	95.4cm	37 9/16"
	176	95.9cm	37 3/4"
	181	97.3cm	38 5/16"
	186	98.7cm	38 7/8"
	193	104.8cm	41 1/4"
	Hyper V6 / BC V6 / BC	163	90.4cm
173		94.6cm	37 1/4"
178		96.7cm	38 1/16"
183		98.7cm	38 7/8"
188		103.5cm	40 3/4"
SR 61 / SR 51 / BC	151	85.7cm	33 3/4"
	161	91.5cm	36"

DISCONTINUED			
Objective / BC	157	87.6cm	34 1/2"
	164	91.4cm	36"
	171	95.4cm	37 9/16"
	178	98.7cm	38 7/8"
Vector / BC	184	102.9cm	40 1/2"
	160	90.2cm	35 1/2"
	170	95.3cm	37 1/2"
	180	101.9cm	40 1/8"
X9 / X7	170	87.3cm	34 3/8"
	180	92.4cm	36 3/8"
	190	98.1cm	38 5/8"
	Charger / BC	154	87.5cm
161		91.1cm	35 7/8"
171		95.9cm	37 3/4"
181		102.6cm	40 3/8"
191		108.6cm	42 3/4"
Buster	176	96.3cm	38"
	186	103.2cm	40 5/8"
Drifter	162	92.1cm	36 1/4"
	172	96.5cm	38"
	182	103.2cm	40 5/8"
	192	109.2cm	43"
Asylum	165	88.9cm	35"
	175	95.3cm	37 1/2"
	185	101.6cm	40"
	195	107.6cm	42 3/8"
Insane	161	87.0cm	34 1/4"
	172	94.0cm	37"
	183	100.3cm	39 1/2"
Carbon Surf	158	89.9cm	35 3/8"
	168	95.3cm	37 1/2"
	178	101.6cm	40"
	183	105.4cm	41 1/2"
	188	106.7cm	42"
WSG / WSP	150	87.6cm	34.5"
	160	93.0cm	36.5"

MADE IN
UTAH
USA



Voilé Manufacturing
2636 South Constitution Blvd
Salt Lake City, UT 84119 USA
Toll Free in USA: (800) 670-8622
Phone: (801) 973-8622
Fax: (801) 973-8918

voile.com

Finding 75mm Nordic Norm Telemark Boot Center

1. Find and mark the Pin-Line on the front of your boot.


Pin-Line is located 14mm back from the boot toe, or centered between the two outside pin holes. Make your mark on the side of the duckbill.

2. Measure from the Pin-line to the back of the boot heel.

Divide this measurement by two, then find the corresponding measurement and mark the boot center on the side of the boot sole.

***Voilé recommends an authorized dealer for all binding mounts.**

****Voilé strongly recommends that all binding manufacturers suggested guidelines and instructions are followed.**

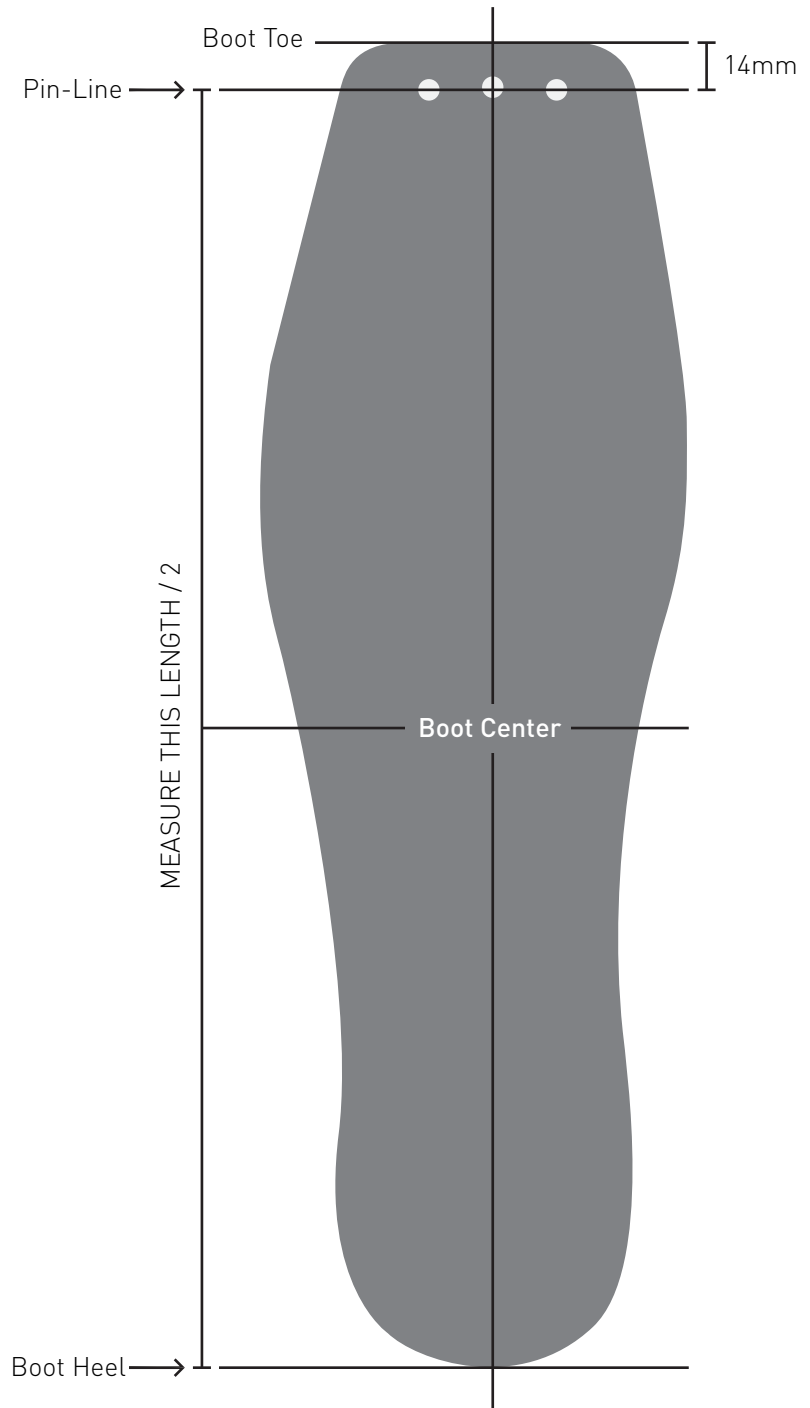

WARNING:

BACKCOUNTRY SKIING/TELEMARKING IS DANGEROUS

Backcountry /Telemark skiing is an inherently dangerous sport in which there is always the possibility of bodily injury and death. The User of this product is solely responsible for learning proper skiing techniques, avalanche awareness, and exercising good judgment.

The manufacturer, distributor, wholesaler, and retailer are not liable for any personal injuries sustained by the use or misuse of this product.

MADE IN
UTAH
USA



Voilé Manufacturing
2636 South Constitution Blvd
Salt Lake City, UT 84119 USA
Toll Free in USA: (800) 670-8622
Phone: (801) 973-8622
Fax: (801) 973-8918

voile.com